

# How To Use

## Loading the Film

1

Slide the back door release down.

2


Open the Back door.

3

Pull up film spool.

4

Slide the 35mm film roll under the film spool.

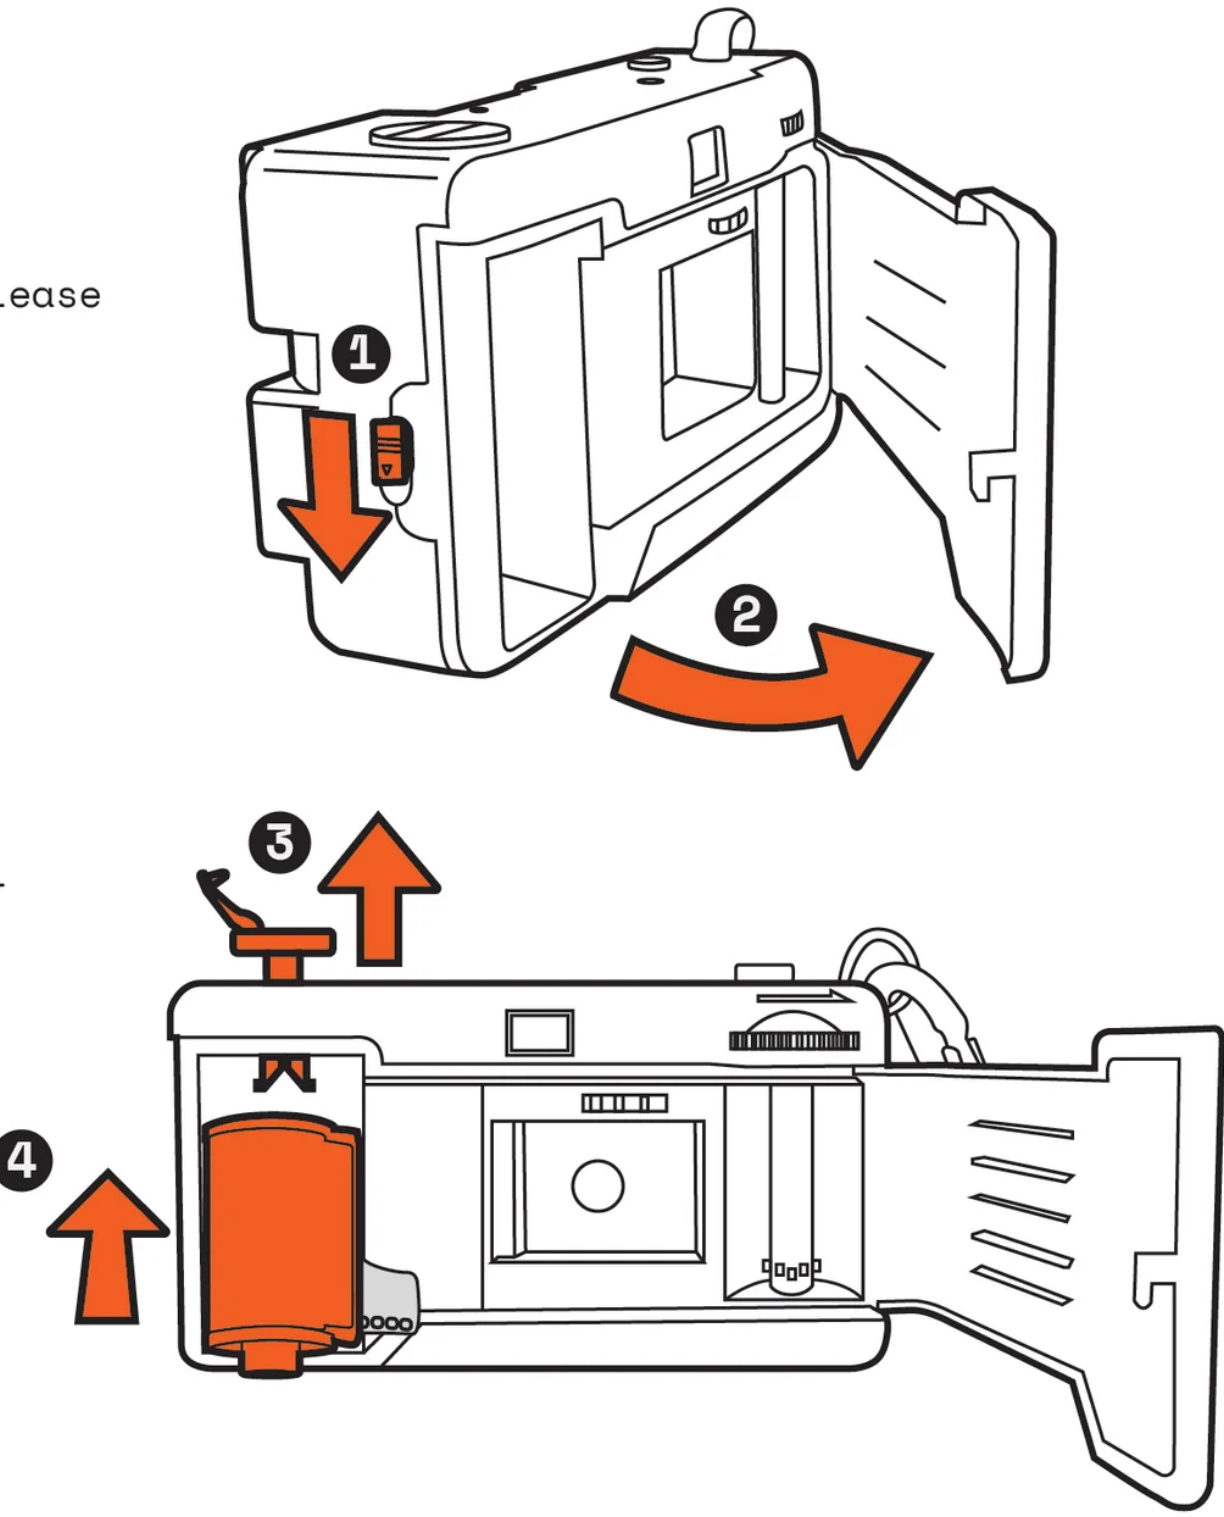

5


Push down the film spool to lock the film roll in place.

6

Pull the film out and secure it to the tube on the right. Ensure the film is coiling around the tube.

7

Scroll the film advance wheel to the right to further advance the film.

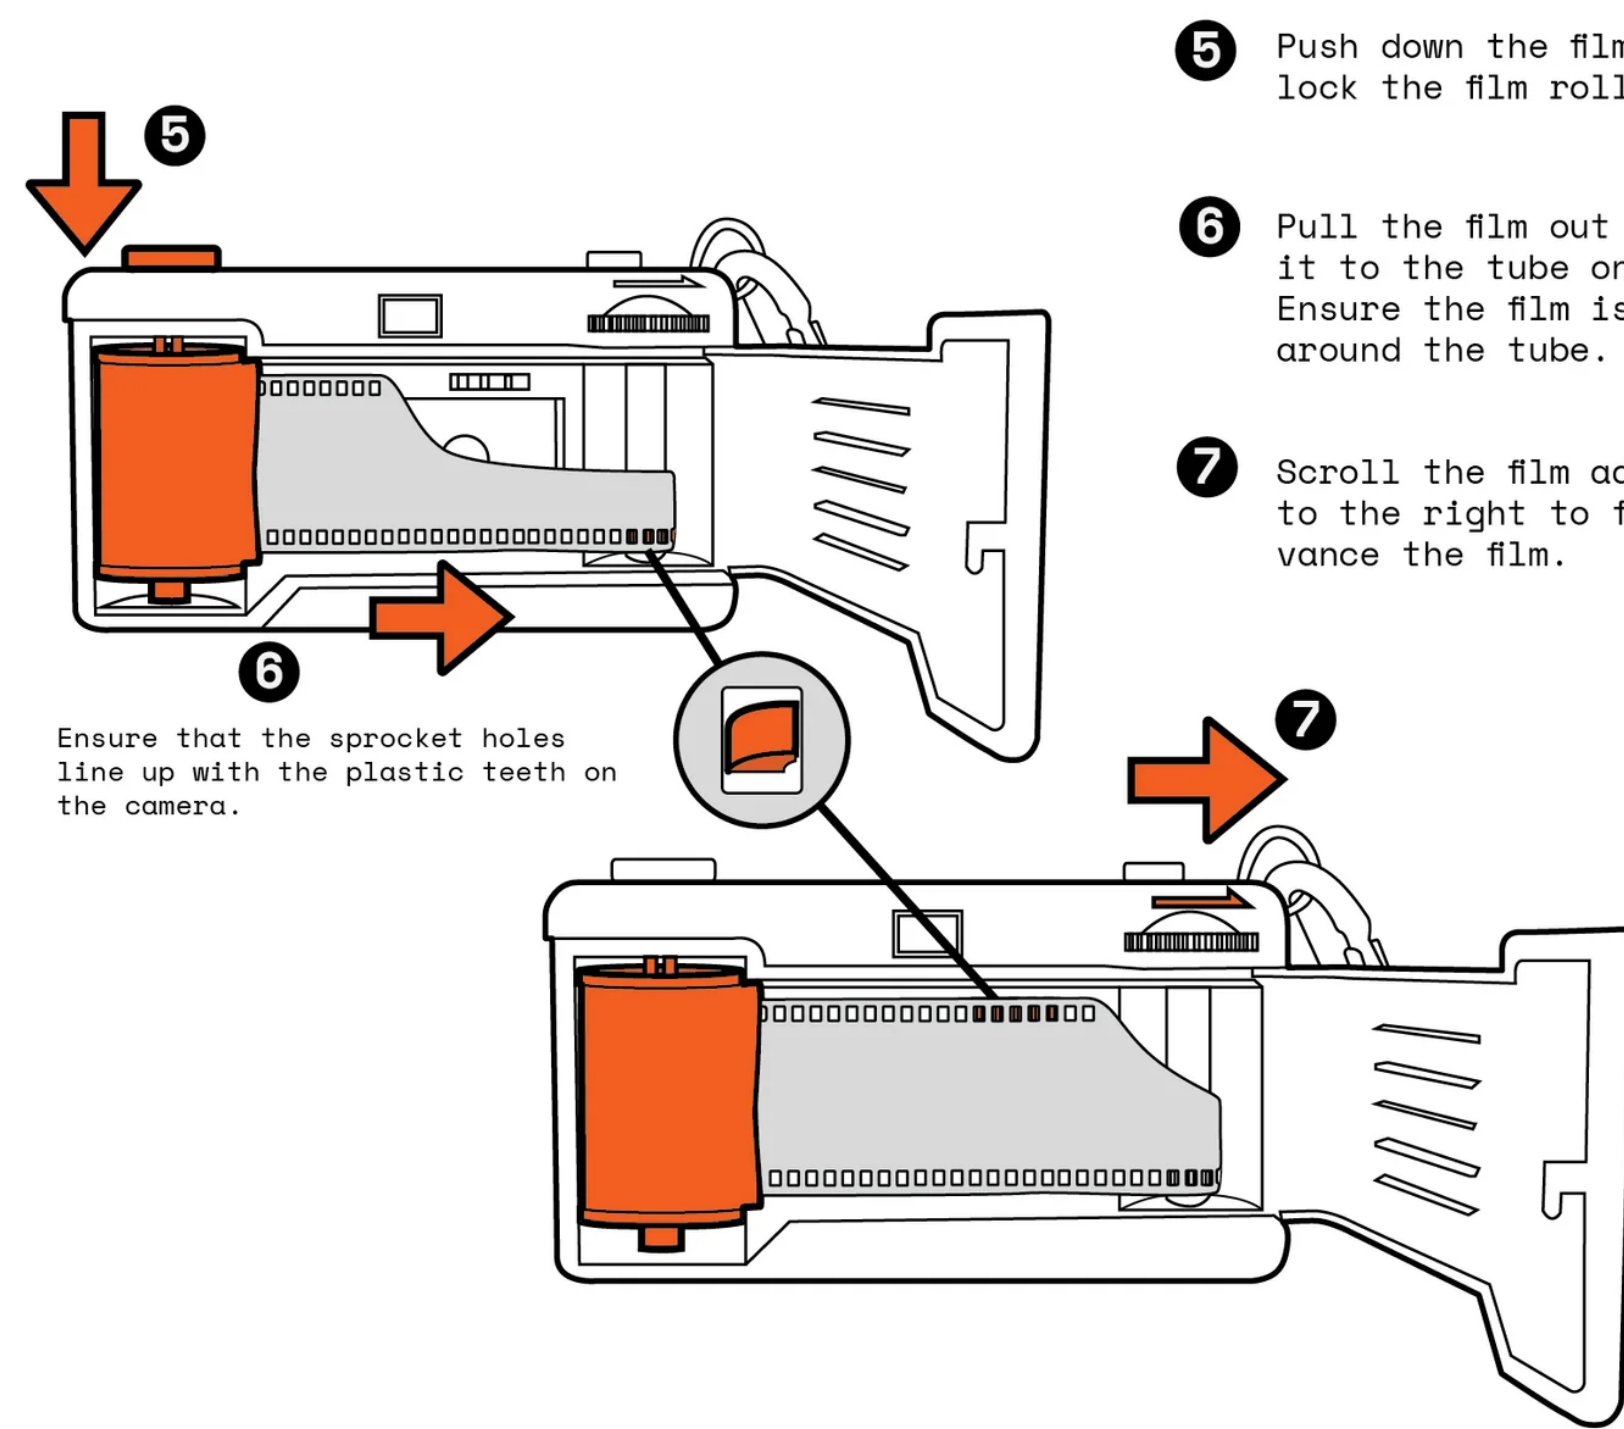


Ensure that the sprocket holes line up with the plastic teeth on the camera.

8

Close the back door and ensure that you hear a "click".

9

Scroll the Film Advance Wheel and click the shutter until the frame counter says 1.

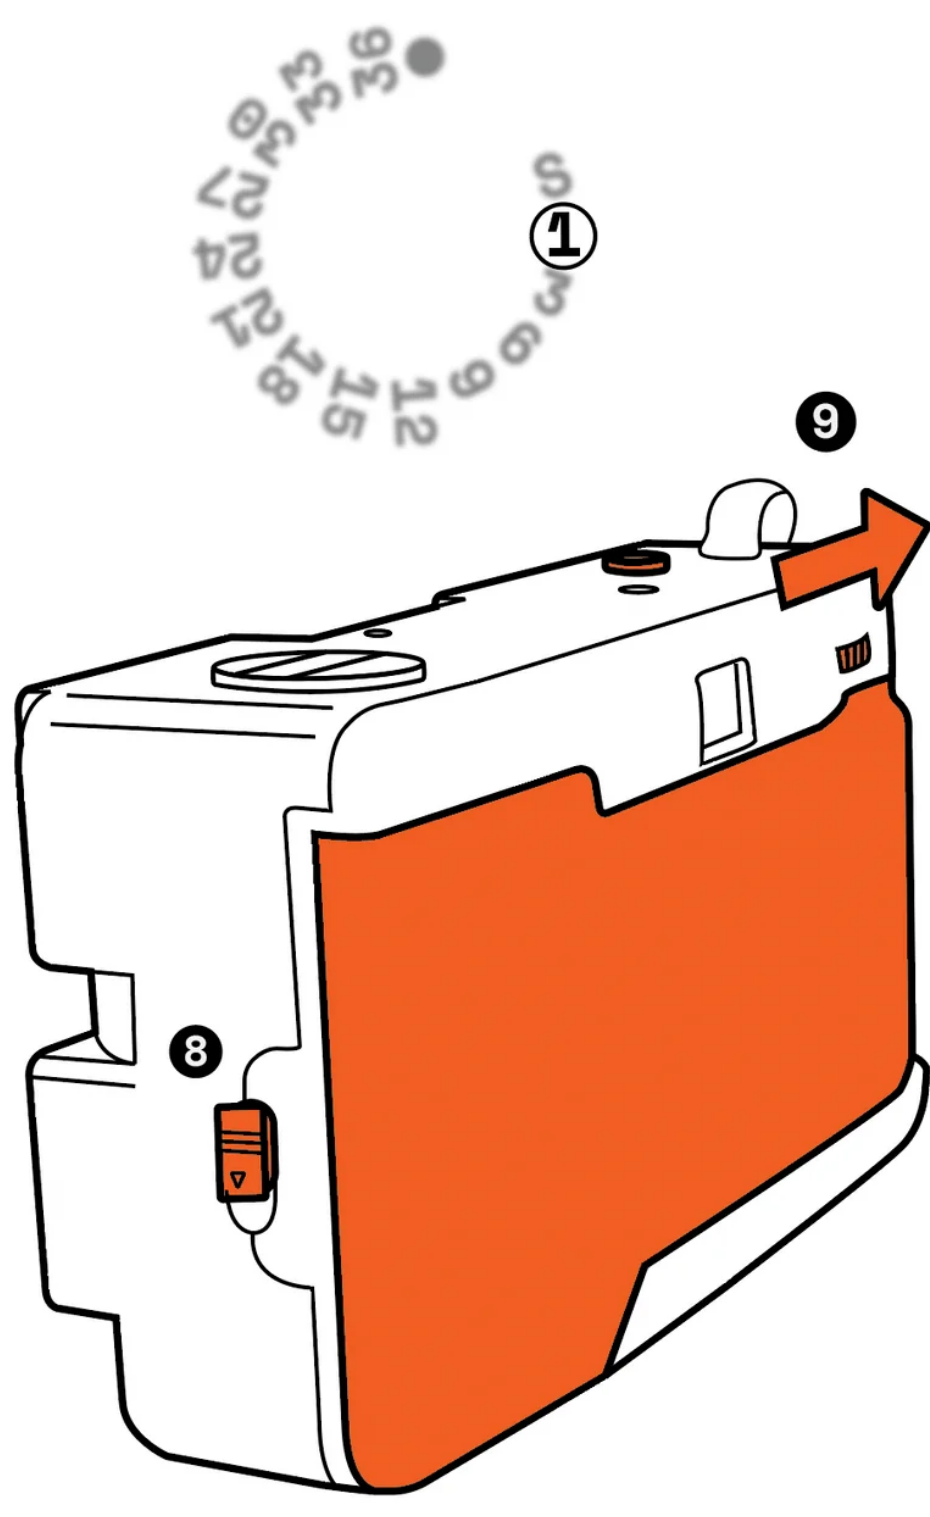


You are ready to take pictures now!


## Using Flash

Flash must be turned on if your environment is not bright.

1

Switch the flash on by sliding the flash button to the left. An orange light will turn on to indicate the flash is turned on. There may be a few seconds delay.

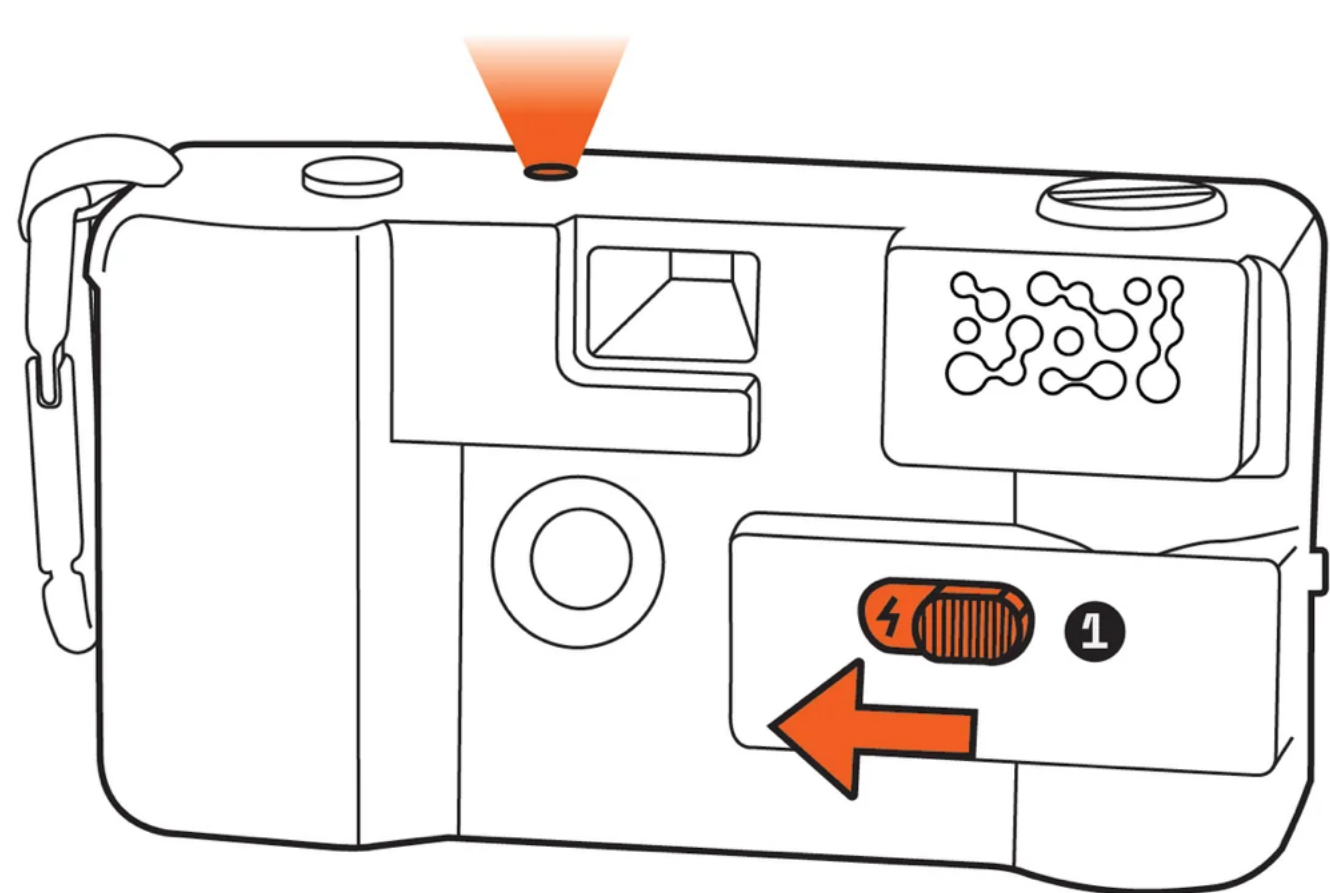

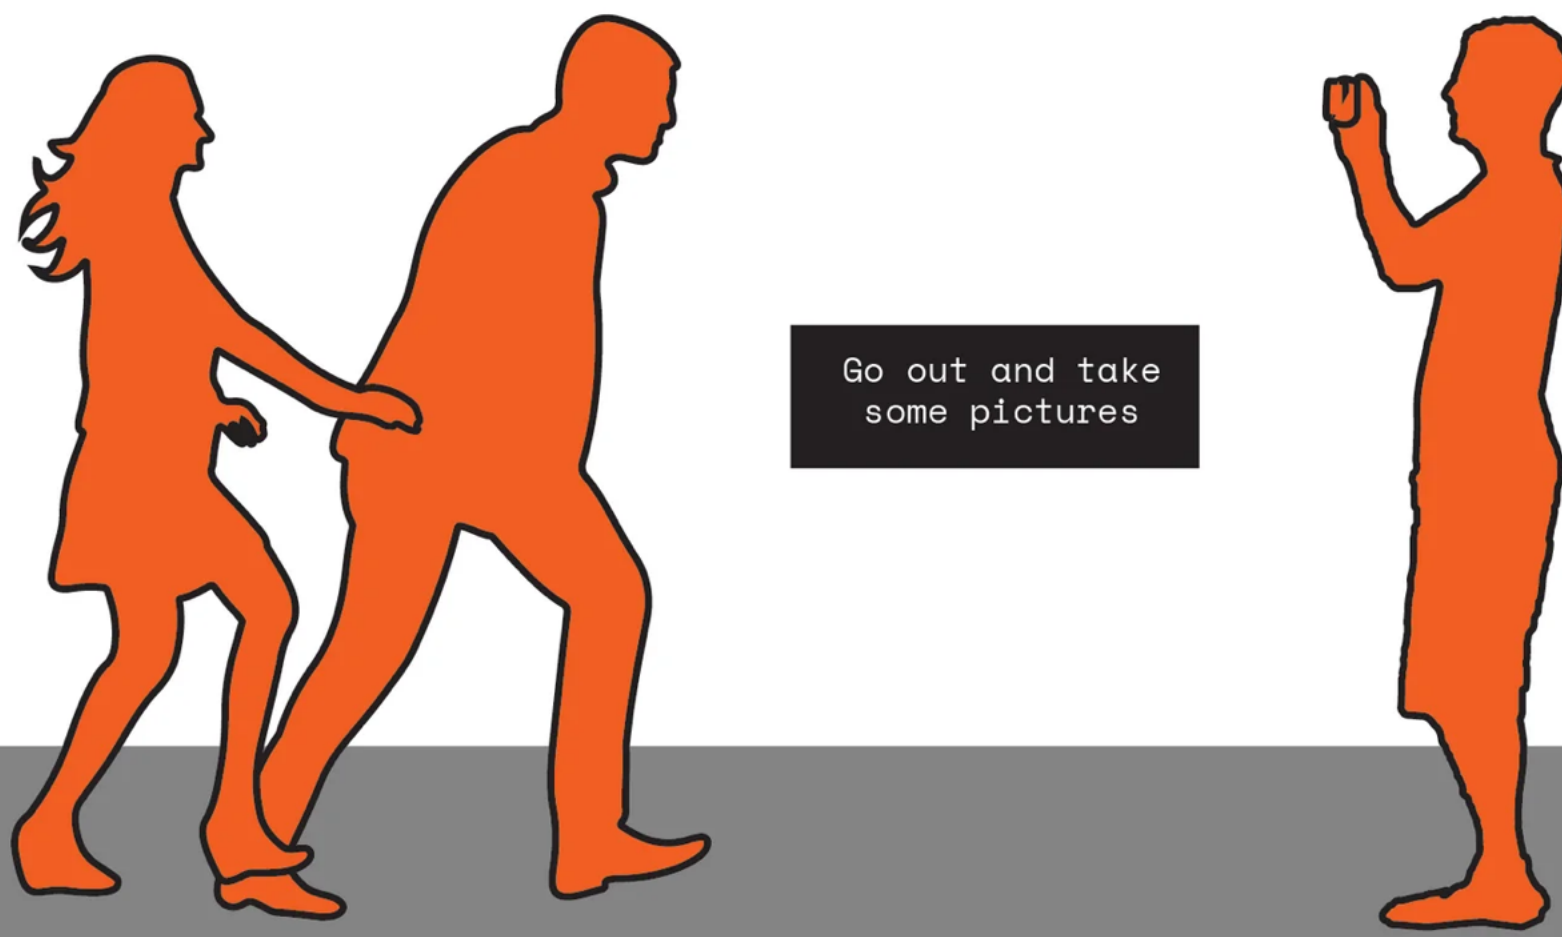

Go out and take some pictures

## Unloading Film

The frame counter will say when every frame in the film roll has been shot. The film must be rewinded before taking the film out and loading a new roll.

1


Press the film release button.

2

Lift the film spool.

3

Turn the film spool clockwise until there is no more resistance.

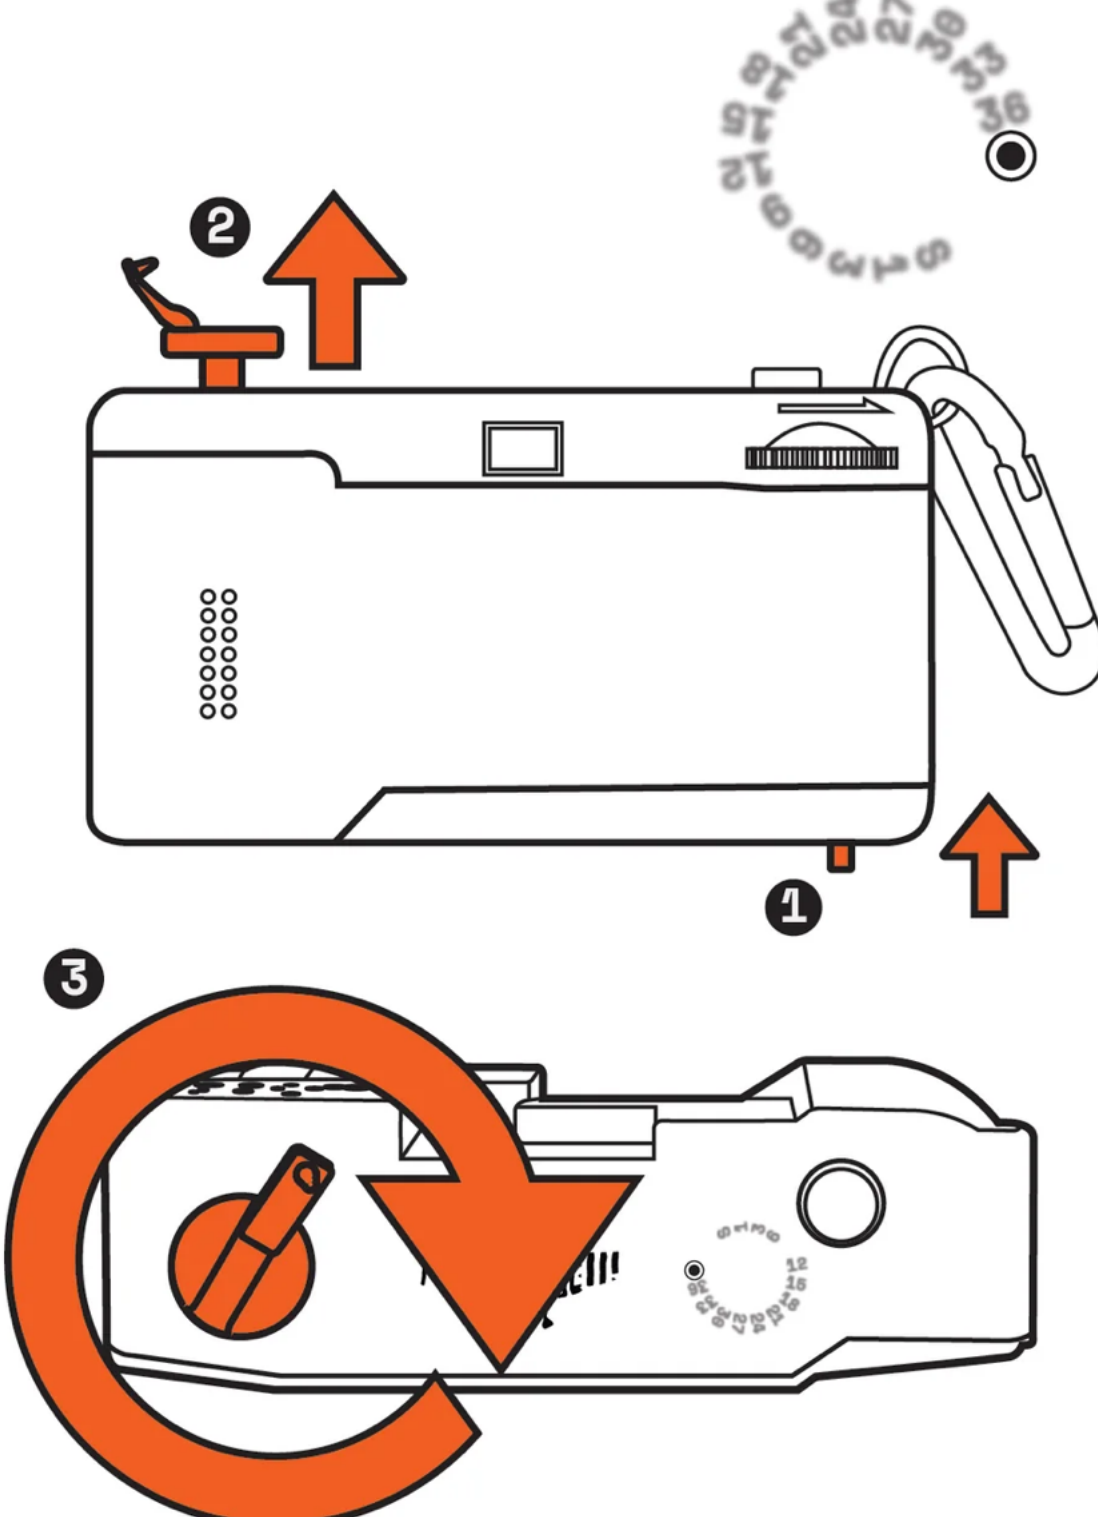

The back door can then be opened and the film can be replaced.